

For further information www.tessilmare.com

Visit our video channel www.youtube.com/tessilmare

TOOLS



A4 (316) type self drilling screws Oval head style (TGS)
Phillips Screw Size N.10, Head 9,5 mm Shank 4,8 mm
Specific codes: DIN7983 or UNI6956, also ISO 7051

WARNING: it is better not to use A2 screws



Drill and Screwdriver



Tip 4 / 4,2 mm



Industrial dryer, only for
application with difficult bends



Rubber hammer




Adhesive / glue

TESSILMARE

STRYKE

STRYKE PROFILES – ASSEMBLY INSTRUCTIONS

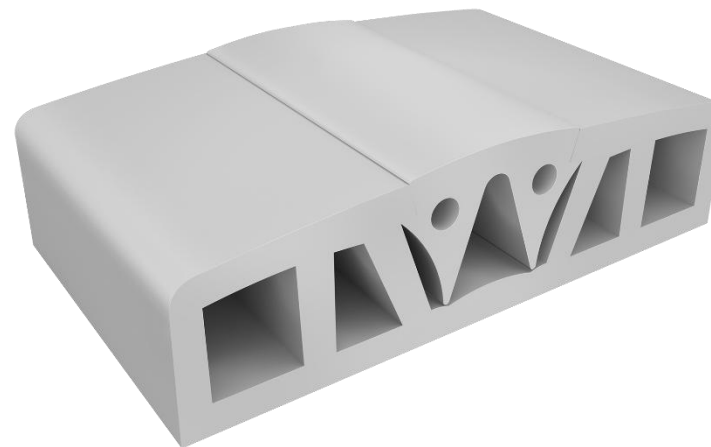

PROJECTED AND DESIGNED BY TESSILMARE IN
ITALY

PAT- PENDING



1. PREPARATION OF THE PROFILE




Fender profiles STRYKE consist of 2 modules: a base and an insert. A fixing pre-drilled stainless-steel / aluminum bar may be offered as an option.

Unwinding of the rolls is a critical step, this operation may be carried out without heating up, though pre-heating makes really easier the mounting phase.

Lay the profile on the ground around the boat or on the boat itself, the more the profile will be lied down correctly, the easier it is its installation..


¹ The pre-heating allows an ideal mounting, you can use a tank of water and an industrial stove leaving the profile to soak for 30/60 minutes at 40-60°, or an industrial oven at low temperatures, or if the weather allows it some hours in sunlight.

2. PREPARING THE PVC BASE

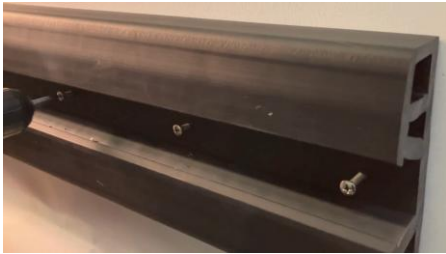

Every 20 cm, drill holes in the PVC base. Insert the screws, but do not tighten them fully. Leave them halfway in to create space between the PVC base and the boat hull.

3. APPLYING THE ADHESIVE

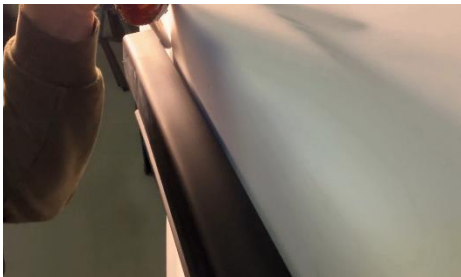

Apply a strong adhesive or silicone suitable for marine use. Spread the adhesive along the back of the profile. Apply it on both upper and lower edges.

4. FIXING THE RUBRAIL TO THE HULL



Push the profile firmly against the hull. Tighten all screws completely. The sealant will begin bonding the profile. The screws will secure firmly in position. In this phase, the optional S/S or aluminum fixing bar can be used for a stronger application.

5. INSTALLING THE INSERT PROFILE




Apply the closing profile by pressing with a rubber hammer.



6. SEALING AND FINISHING

Apply silicone along the outer edges for perfect sealing.

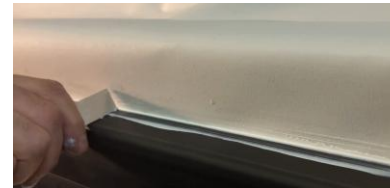

7. END CAPS INSTALLATION



Cut the profile and fix the 2 modules at the end with a screw (before the endcap).

Complete with the end caps. They must partially overcome the end of the profile (they must not be fixed on its side).